



Fujitsu LifeBook N3510 Hinge Cover Replacement

Written By: Neil Daniels



INTRODUCTION

The hinge cover has the computer power button, wireless switch, and volume toggle.



TOOLS:

- [Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [Magnetic Project Mat](#) (1)
-

Step 1 — Battery



- Start by locating the two clips on the bottom of the computer that support the battery.

Step 2



- Use your fingers to push the clips inward and then upward.
- Lift the battery out of the computer.

Step 3 — Hinge Cover



- Use a spudger to lift the back of the hinge cover on the left and right sides of the computer.

Step 4



- Lay the computer flat on a stable surface with the monitor pointing away from you.


Step 5



- Use a spudger to partially lift the hinge cover.

Step 6



 The hinge cover has a ribbon cable that is attached to the motherboard. To prevent damage, lift the hinge cover slowly.

- Lift the hinge cover out of place enough to expose the ribbon cable.

Step 7



- Disconnect the ribbon cable from the motherboard and remove the hinge cover from the computer.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-27 12:49:40 AM.